



Model NO. 40W/SHOP/2T/L



LED Linkable Shoplite Fixture

General Safety Information (Please see the reverse for Installation Instructions)

READ AND FOLLOW SAFETY INSTRUCTIONS DISCONNECT POWER BEFORE INSTALLATION

To reduce the risk of personal injury or property damage from fire, electric shock, falling parts, cuts/abrasions, and other hazards, read all warnings and instructions included with and on the LED Linkable Shoplite box and all LED Linkable Shoplite labels.

THIS DEVICE IS NOT SUITABLE FOR USE WITH DIMMERS.
THIS DEVICE IS SUITABLE FOR USE IN DAMP LOCATIONS.

WARNING:

Risk of electric shock or fire. Do not use with an extension cord near water or where water may accumulate. Keep the LED Linkable Shoplite at least 16 feet away from pools and spas. Keep the plugs and receptacles dry.

- Turn off the switch and circuit breaker before installing.
- Install directly beneath a ceiling-mounted receptacle.
- Not intended for recessed installation.
- Use only insulated staples or plastic ties to secure the cord.
- Do not install directly over a heat source (stove, etc.)
- Installation should not be made on a radiant-heating ceiling.
- Injury to people and damage to the fixture and/or mounting surface may result if the fixture is pulled from the surface. To reduce the likelihood of such injury or damage, mount only on a mechanically sound surface.
- Do not alter the plug or power supply cord in any way or try to install this product in any other method besides method shown on this sheet.

NOTICE:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Care & Cleaning

CAUTION: Disconnect the power before attempting to clean the fixture. Greenlite's LED Linkable Shoplite is manufactured from quality materials that last many years with minimum care. It is recommended to periodically clean the diffuser and the interior of the fixture using a mild, non-abrasive glass cleaner and a soft cloth. **DO NOT use solvents or cleaners containing abrasive agents.**

LIMITED WARRANTY:

This product is warranted to be free from defects in workmanship and material for 5 years. If it fails to do so, Greenlite™ will send you, at its election, a replacement product or refund your original purchase price upon receipt of the returned product, register receipt and proof of purchase. Please visit www.greenliteusa.com to find out how to return the fixture. This limited warranty does not cover fixtures subject to accident, neglect, abuse, misuse or acts of God. Replacement or refund is your sole remedy.

For all enquiries, please contact our customer service team at:
info@greenliteusa.com or 1-877-255-0004 from 9:00 AM to 5:00 PM EST.

Please see the other side for Installation Instructions

LED Linkable Shoplite Fixture


Parts included in the package: LED luminaire X1, Screw hook X2, Plastic anchor X2, Screw X3, Connector X1, Hanging chain X2



Installation Instructions (Please see the reverse for General Safety Information)


1. Mounting to drywall

Drill a 1/4" hole in the ceiling. Make sure to fasten the screw hook into the plastic anchor before inserting into the ceiling. Tighten the screw hook.

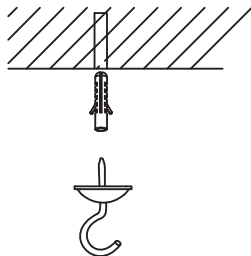


2. Mounting to wood

Drill a 1/16" diameter pilot hole in the ceiling. Make sure to fasten the combo wood-machine end into the screw hook. Tighten the screw hook into the wood.

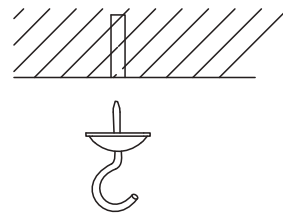


3. Attaching the light to the chain

Install one header of chain to the hook on the fixture. Repeat this step on the other side of the fixture.

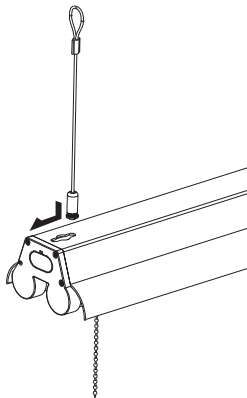


4. Attaching the chain to the ceiling

Attach the chain to the two hooks mounted on the mounting surface. Adjust chains to level light. The fixture must hang at least 3 in. from the ceiling.

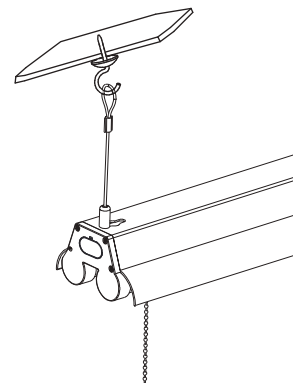


5. Connecting the power cord

After installation, plug the power cord (B) into the end of the fixture and then into the power supply. Pull the chain to turn on the Switch (C).

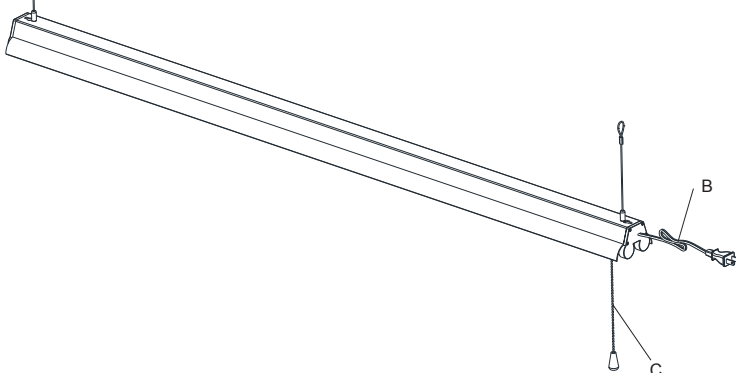

6. Connecting lights in series using end connector

Fixtures can be connected directly together using the end connector (D).

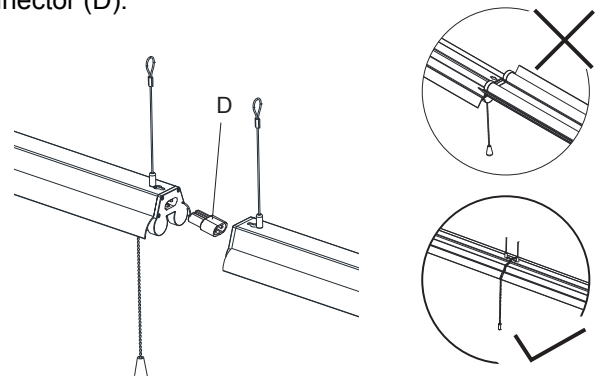


LED Linkable Shoplite Fixture

Optional Surface Mounting - Installation Instructions



1. Securing fixture to ceiling

Once the head of the screw is in the opening, gently slide the fixture to the right or left to secure it in place. You may need to adjust the depth of both screws to get a tight fit.

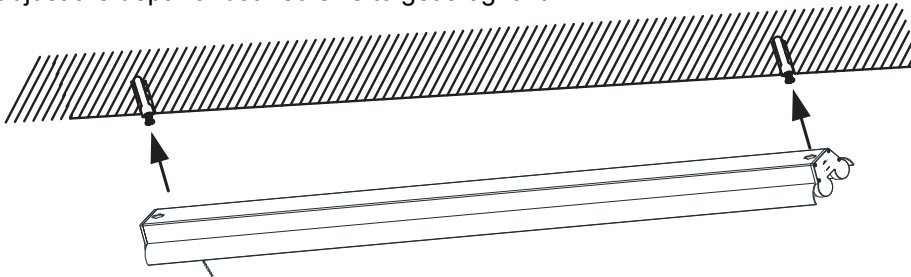

2. Locking the fixture to ceiling

With each fixture installation, insert additional screw in the ceiling opposite screw installed in Church Key hole. This will prevent the fixture from accidentally sliding of screw mounting.

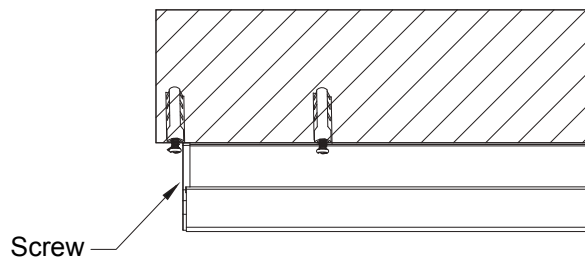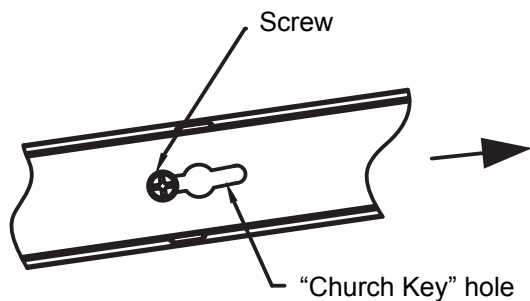

Screw

Please check with your local inspector to insure this mounting method meets local requirements.

