



INSTALLATION INSTRUCTIONS

Measure and cut the product to the necessary length. Fold along the pre-scored center line, keeping the adhesive side on the outside. Peel off the adhesive backing paper and press into place, making sure the "V" compresses as the door or window is closed.

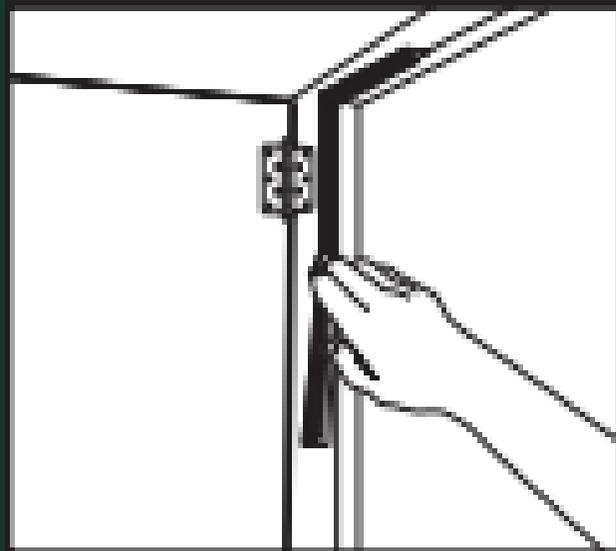

DOOR INSTALLATION

Apply it to the door stop molding across the top and down the latch side. On the hinge side, apply to the door frame next to the molding.

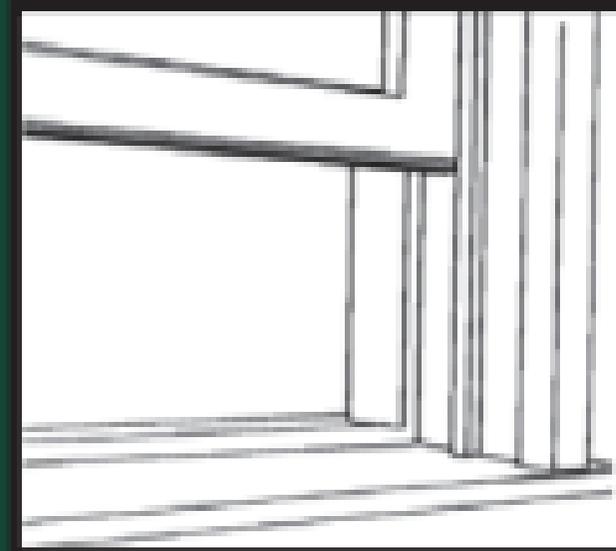

WINDOW INSTALLATION

Apply to the upper and lower window sashes between the window and the window sill.